

# EXHIBIT 1

AirDefense User Guide  
Issue 1.02, AD-UG-1.02, Release 3.0  
January, 2003

Copyright © 2002-2003, AirDefense, Inc. All rights reserved.  
*Printed in the United States of America*

## *Proprietary Notices*

---

AirDefense is licensed software and hardware. Its use is subject to the terms and conditions of a license agreement or nondisclosure agreement between AirDefense, Inc. and its customers. It is against the law to copy the software on any medium except as specifically allowed in the license or nondisclosure agreement.

Information contained in this document is subject to change. No part of this manual and/or software may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording, or information storage and retrieval systems, for any purpose other than personal use by AirDefense, Inc. without the express written permission of AirDefense, Inc.

## *Trademarks*

---

AirDefense™ is a trademark of AirDefense, Inc. in the U.S. and other countries.  
*All other trademarks are the property of their respective owners.*

## *Cautionary Statements*

---

- **Caution:** There are no user-serviceable components inside the AirDefense Server appliance. Opening the chassis will void your service agreement.
- **Caution:** The recommended ambient operating temperature of the AirDefense Server appliance is 0°C—55°C. Installation in a closed or multi-rack assembly may raise the immediate ambient temperature above the average room temperature. Exercise due caution.
- **Caution:** Provide adequate spacing above, below, and behind the AirDefense Server appliance, to allow proper air flow, and to prevent excessive heat buildup.
- **Caution:** Use only industry-standard mounting kits when installing the AirDefense Server appliance, as improper mounting may result in hardware failure and hazardous conditions.
- **Caution:** Ensure that the electrical circuit through which the appliance is powered can safely accommodate the AirDefense Server's 300 Watt power supply.

## *Publication History*

---

October 2002    Issue 1.00 of this document, for AirDefense software Release 2.0  
December 2002    Issue 1.01 of this document, for AirDefense software Release 2.1  
January 2003    Issue 1.02 of this document, for AirDefense software Release 3.0